

INSTRUCTION MANUAL • INSTRUKCJA OBSŁUGI

OFFICE CHAIR

FOTEL BIUROWY









SPC-MENNKAR-M4135

 SPACETRONIK SP. Z O.O.
WIŚNIOWA 36,
64-000 KOŚCIAN, POLAND
INFO@SPACETRONIK.STORE
WWW.SPACETRONIK.STORE



MADE IN P.R.C.

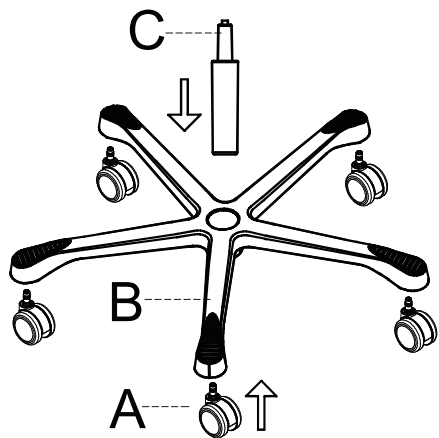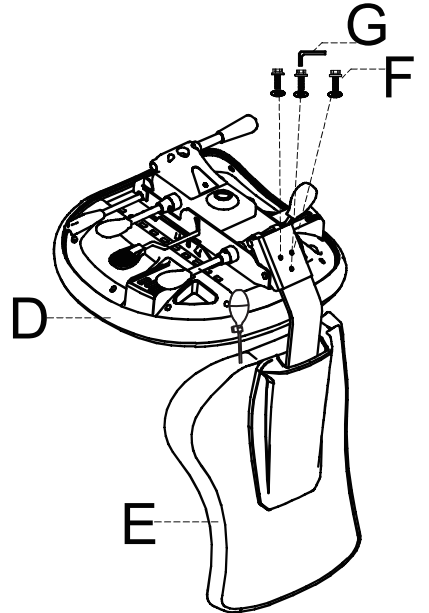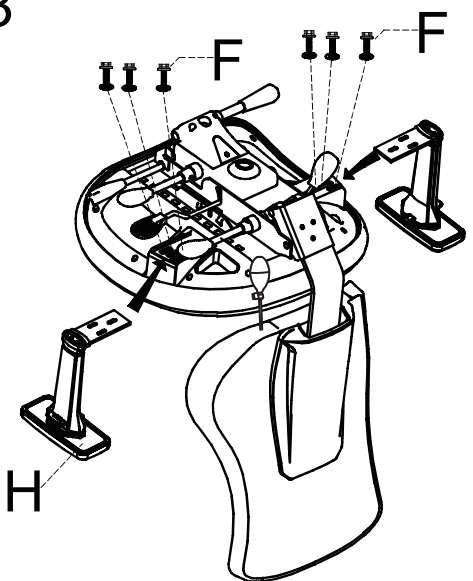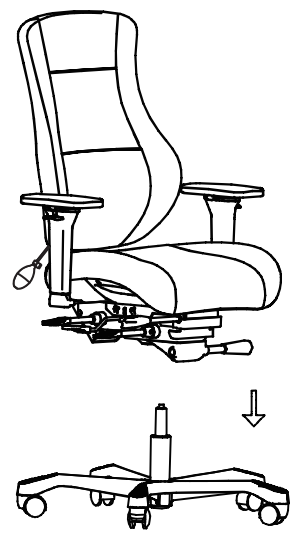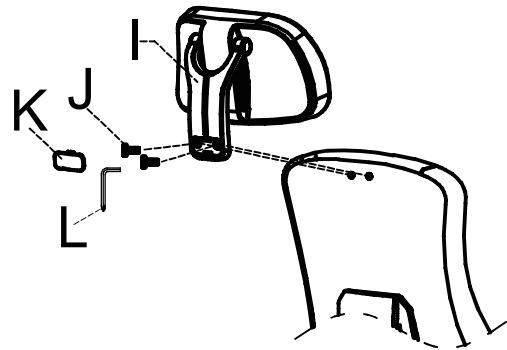

Part	Picture	Qty.			
A		5	1 	2 	3 
B		1			
C		1			
D		1			
E		1			
F	 M8x20	9			
G		1	4 	5 	6 
H		2			
I		1			
J	 M6x25	2			
K		1			
L		1			

Headrest adjustment:

- To rise: Hold the headrest (①) with both hands and lift it up to a suitable height.
- To lower: Hold the headrest with both hands and pull it down to a suitable height.
- To adjust the headrest angle: Hold the headrest with both hands and turn it to a suitable angle.

Back height adjustment:

- To rise: Hold the bottom of the chair back (②) with both hands and lift it up to a suitable height step by step.
- To lower: Hold the bottom of the chair back with both hands and lift it step by step. After crossing the highest position, the back can be lowered to the lowest position.
- Attention: Backrest can NOT lower down during the adjustment to upward; Only can lower down to lowest position when reaching the highest position and release your hands.

Lumbar support adjustment:


- To enlarge the lumbar support (air bag) depth, hold and press the pump (③) until it reach your desired position.
- To reduce the depth, press the button on the pump to release the air until it reach your desired position.

Armrest adjustment (④):

- Armrest height: Pull up the button while holding the armrest and lift it up or lower it down.
- Armpad forward/backward: Grasp the armpad and slide forward or backward.
- Armpad angle: Grasp the armpad and pivot to the left or right.
- Armrest width: Grasp the armpad and press the button under the armpad, move horizontal to the left or right.

Seat height adjustment (⑤):

- To raise: Lift up the lever when leaving or half up, release the lever when reaching a desired height.
- To lower: While sitting, lift the lever up, release the lever when reaching a desired height.

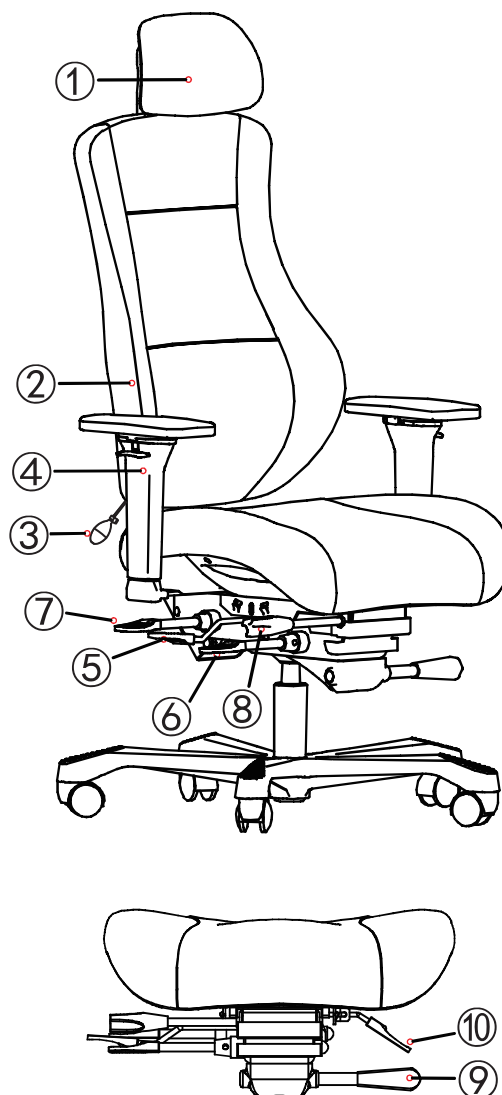

Tilt angle adjustment (Tilt/Swing Lock) (⑥):

- To unlock: Pull up the adjustment lever.
- To lock: Push down the adjustment lever when reaching a desired angle.

Independent backrest angle adjustment (⑦):

- To unlock: Pull up the adjustment lever.
- To lock: Push down the adjustment lever when reaching a desired angle.

Seat angle adjustment (⑧):

- To lift up: Turn anticlockwise the seat angle adjustment handle.
- To lower down: Turn clockwise the seat angle adjustment handle.
- Tips: When using this function, please sit on the chair, lie back to keep the chair body at a recline posture, then it is easier to turn the handle.

Tilt tension adjustment (⑨):

- To increase: Turn the knob clockwise/forward to stronger.
- To reduce: Turn the knob anticlockwise/backward to weaker.

Seat depth adjustment (⑩):

- To increase: While sitting and pull up the lever, at the same time, push your hips forward to slide the seat cushion to a proper position, and then release the lever.
- To reduce: When leaving or half up, pull up the lever, and the seat cushion can return to the rear position, or release the lever when it reaches the desired position.

The WEEE symbol (the crossed-out wheeled bin) using indicates that this product is not home waste. Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. In order to get detailed information about recycling this product please contact your retailer or a local authority.



MADE IN P.R.C.
SPACETRONIK SP. Z O.O.
WIŚNIOWA 36, 64-000 KOŚCIAN, POLAND
INFO@SPACETRONIK.STORE
WWW.SPACETRONIK.STORE

Regulacja zagłówka:

- Podniesienie: Chwyc zagłówek (①) oburącz i unieś go na odpowiednią wysokość.
- Obniżenie: Chwyc zagłówek oburącz i opuść go do odpowiedniej wysokości.
- Regulacja kąta nachylenia: Chwyc zagłówek oburącz i obróć go do odpowiedniego kąta.

Regulacja wysokości oparcia:

- Podniesienie: Chwyc dolną część oparcia (②) oburącz i podnoś je stopniowo do odpowiedniej wysokości.
- Obniżenie: Chwyc dolną część oparcia oburącz i unosząc je stopniowo, przekrocz najwyższy punkt – wtedy oparcie automatycznie opuści się do najniższej pozycji.
- Uwaga: Oparcie nie można obniżyć podczas podnoszenia – można je obniżyć dopiero po osiągnięciu najwyższej pozycji i puszczeniu.

Regulacja podparcia lędźwiowego:



- Aby zwiększyć głębokość podparcia (poduszka powietrzna), przytrzymaj i naciśnij pompkę (③), aż osiągniesz pożądaną pozycję.
- Aby zmniejszyć podparcie, naciśnij przycisk na pompce, by wypuścić powietrze do żądanej głębokości.

Regulacja podłokietników (④):

- Wysokość: Przytrzymaj podłokietnik, naciśnij przycisk i unieś lub opuść podłokietnik.
- Przesunięcie przód/tył: Przesuń poduszkę podłokietnika do przodu lub do tyłu.
- Kąt obrotu: Obróć poduszkę podłokietnika w lewo lub w prawo.
- Szerokość: Naciśnij przycisk pod poduszką podłokietnika i przesuń ją poziomo w lewo lub prawo.

Regulacja wysokości siedziska (⑤):

- Podniesienie: Unieś dźwignię podczas wstawania lub lekko uniesionym, zwolnij ją po osiągnięciu odpowiedniej wysokości.
- Obniżenie: Siedząc, unieś dźwignię i zwolnij ją, gdy osiągniesz odpowiednią wysokość.

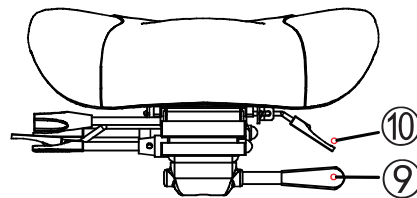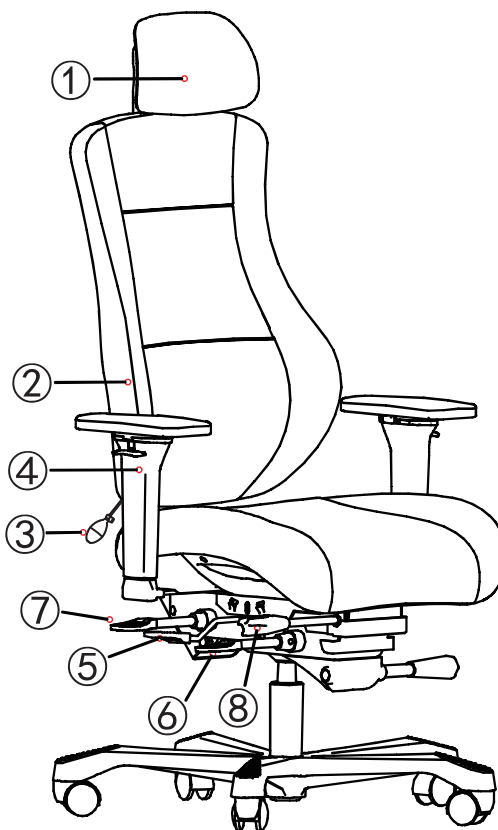

Regulacja kąta nachylenia / blokada bujania (⑥):

- Odblokowanie: Unieś dźwignię regulacyjną.
- Blokada: Naciśnij dźwignię w dół po ustawieniużądanego kąta.

Niezależna regulacja kąta oparcia (⑦):

- Odblokowanie: Unieś dźwignię regulacyjną.
- Blokada: Naciśnij dźwignię w dół po osiągnięciu odpowiedniego kąta.

Regulacja kąta siedziska (⑧):

- Podniesienie przodu siedziska: Obróć pokrętkę regulacyjną przeciwnie do ruchu wskazówek zegara.
- Obniżenie przodu siedziska: Obróć pokrętkę zgodnie z ruchem wskazówek zegara.
- Wskazówka: Podczas korzystania z tej funkcji usiądź na krześle i odchyl się do tyłu — ułatwi to obracanie pokrętką.

Regulacja siły oporu odchylenia (⑨):

- Zwiększenie oporu: Obróć pokrętkę zgodnie z ruchem wskazówek zegara / do przodu.
- Zmniejszenie oporu: Obróć pokrętkę przeciwnie do ruchu wskazówek zegara / do tyłu.

Regulacja głębokości siedziska (⑩):

- Wydłużenie siedziska: Siedząc, unieś dźwignię i jednocześnie przesuń biodra do przodu, aż siedzisko znajdzie się w odpowiedniej pozycji, a następnie zwolnij dźwignię.
- Skrócenie siedziska: Podczas wstawania lub będąc lekko uniesionym, unieś dźwignię, a siedzisko wróci do pozycji wyjściowej lub zatrzyma się na wybranej głębokości.

The WEEE symbol (the crossed-out wheeled bin) using indicates that this product is not home waste. Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. In order to get detailed information about recycling this product please contact your retailer or a local authority.

Symbol WEEE (przekreślony kosz na śmieci) oznacza, że ten produkt nie jest odpadem domowym. Odpowiednia gospodarka odpadami pomaga uniknąć szkodliwych dla ludzi i środowiska konsekwencji wynikających z zastosowania w urządzeniu niebezpiecznych materiałów, a także niewłaściwego przechowywania i przetwarzania. Segregowana zbiórka odpadów domowych pomaga w recyklingu materiałów i komponentów, z których wykonano urządzenie. Aby uzyskać szczegółowe informacje na temat recyklingu tego produktu, skontaktuj się ze sprzedawcą lub lokalnymi władzami.



MADE IN P.R.C.
SPACETRONIK SP. Z O.O.
WIŚNIOWA 36, 64-000 KOŚCIAN, POLAND
INFO@SPACETRONIK.STORE
WWW.SPACETRONIK.STORE