


ELECTRICALLY ADJUSTABLE BACK AND HEAD SUPPORT FOR BED

SPBDORMEE

Installation Instruction & User Guide

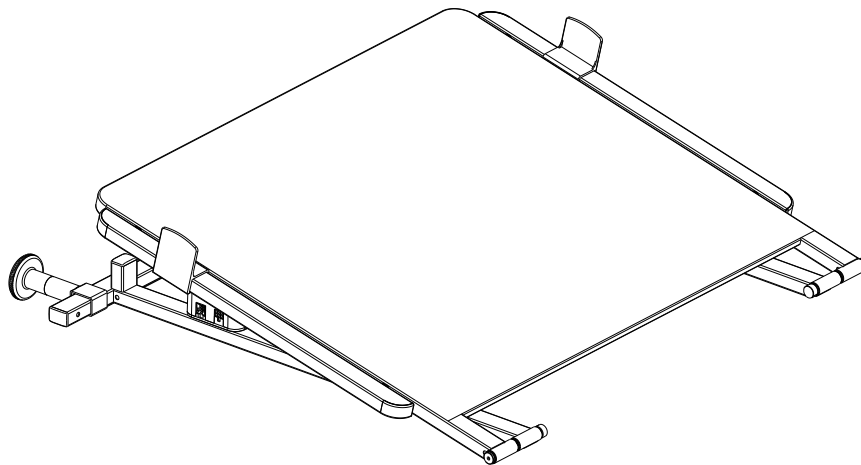


MADE IN P.R.C. FOR
SPACETRONIK SP. Z O.O.
UL. WIŚNIOWA 36
64-000 KOŚCIAN, POLAND
INFO@SPACETRONIK.STORE
WWW.SPACETRONIK.STORE

The pictures are for reference only, the actual product shall prevail.
Please read the instruction manual before installing and using the furniture.

CONTENTS


1. Product Parameters	P1
2. Installation Preparation	P1
3. Component List	P2
4. Recommended Matching Size	P3
5. Remote Control Functional Specification	P4
6. Remote Control Pairing	P5
7. Installation Guide	P6-P16
8. Troubleshooting	P17
9. Attention	P18

Product Parameters

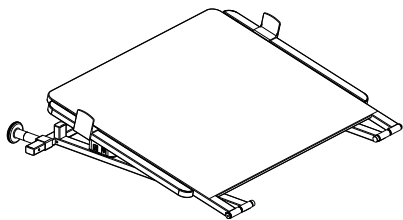


Product name	Electric back lift bed		
Item No.	SPBDORMEE		
Back angle	4°~60°	Load capacity	90kg
Input power	AC100V~240V	Noise	< 60dB


Installation Preparation



Install on carpet to prevent scratches.

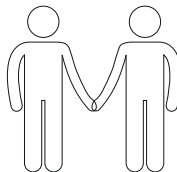






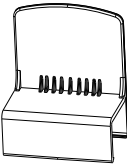


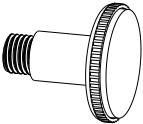

Need two or more people to cooperate together.




Knife or scissors. (prepared by customer)

Component List

Attention: The drawings below are only for reference which might be slightly different from the actual object, please refer to the actual product. If there are any tools missing or installation problems, please contact the customer service.

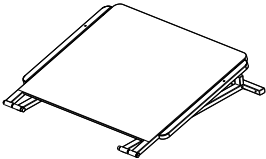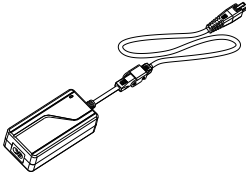
1. Bed frame+Cloth cover (x1)	2. Adaptor (x1)	3. Remote control (x1)	4. AC power cord (x1)	5. Bed tail baffle (x2)
				
6. Bedside baffle (x2)	7. 2m strap (x2)	8. Short bolt (x2)	9.Long bolt (x2)	10. Nut (x2)
				

Recommended matching size

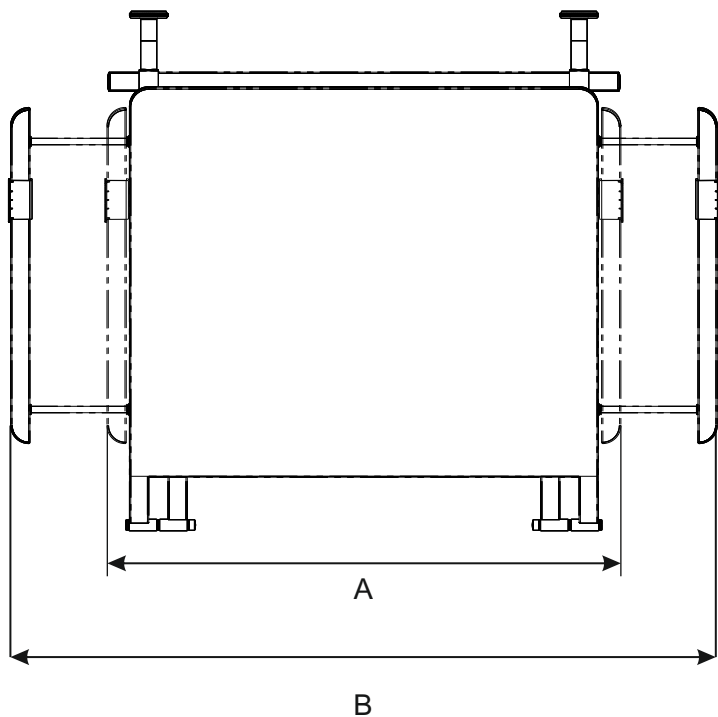





Product model	Starting width A	Maximum width B	Matches mattress widths
SPBDORMEE-02	800mm	1100mm	800-1100mm
SPBDORMEE-03	1200mm	1600mm	1200-1600mm

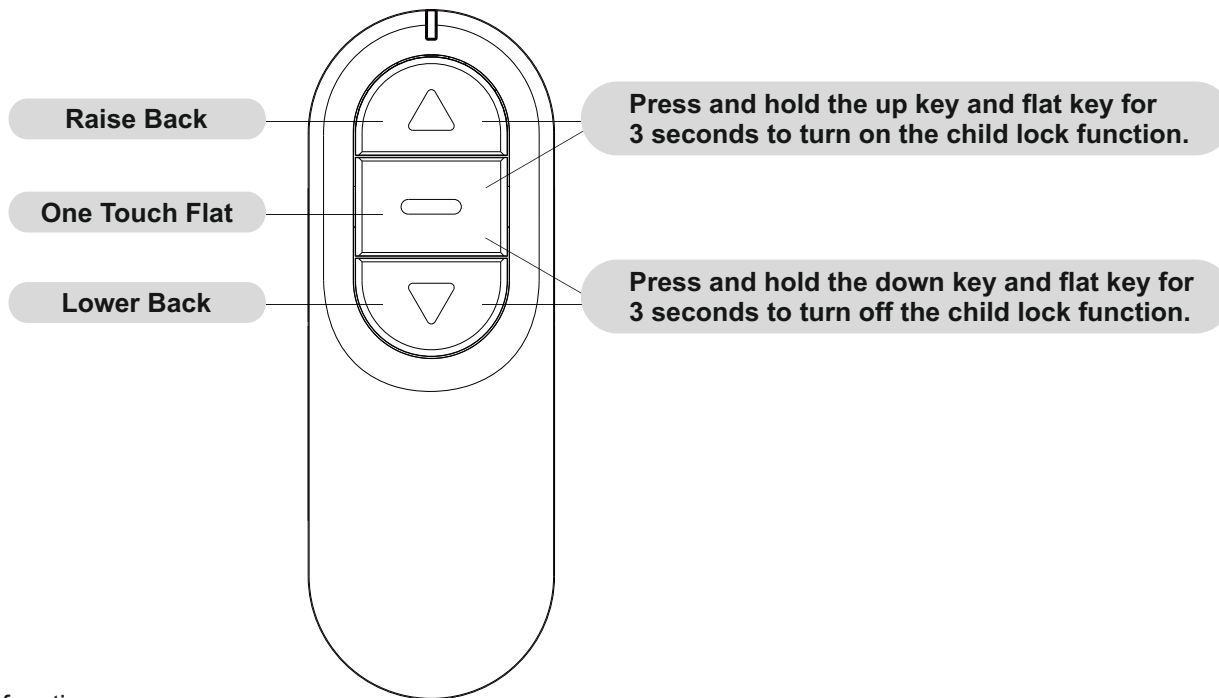Wireless Remote





● Child lock function:

1. Turn on the child lock: Press and hold  and  for 3 seconds at the same time, the indicator light flashes 3 times and then stays on, indicating that the child lock is on; the button function is not available when the child lock is on. Use any key indicator flashes 2 times.
2. Turn off the child lock: Press and hold  and  for 3 seconds at the same time, the indicator light will flash 2 times, and then turn off after 3 flashes, indicating that the child lock is off, and the button function will resume.

Remote Control Pairing

The remote control is paired with the adjustable bed before delivery. If you find that the keys on the remote control are invalid, or if you replace the remote control, please re-pair according to the following steps.

Press and hold the up key and down key to pair code.

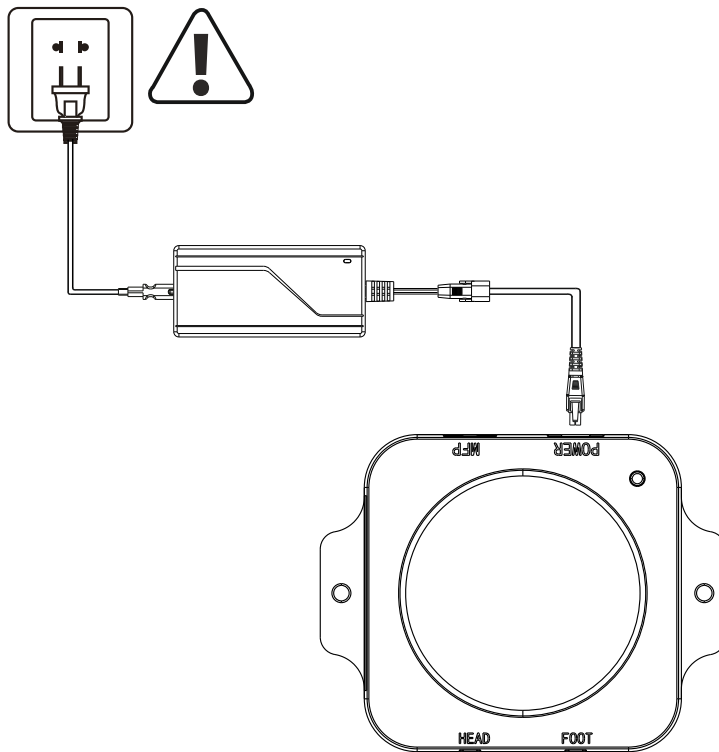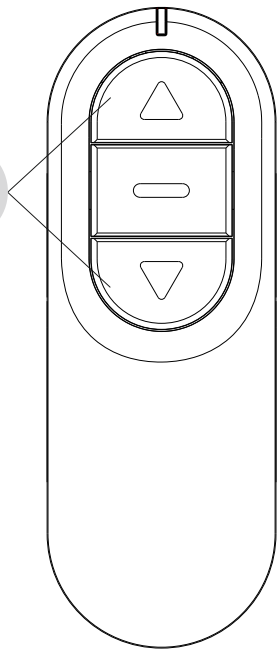

1. Unplug the basic power supply and turn on the power after the adaptor indicator goes out. During the 10 seconds that the whole bed is powered on, press and hold " \triangle " and " ∇ ".
2. The indicator light of the remote control flashes to indicate that it has entered the code pairing state, and then it turns off as a successful code pairing, otherwise it keeps flashing.


Bed Frame Installation

NOTE: For safety reasons, the adjustable bed must always be installed by 2 people; and the product should always be on a flat surface before opening.

STEP1

Unfasten the strap

Take out the adjustable bed frame, place the cloth cover side down on the bed. Undo the orange cable tie where the arrow is pointing.

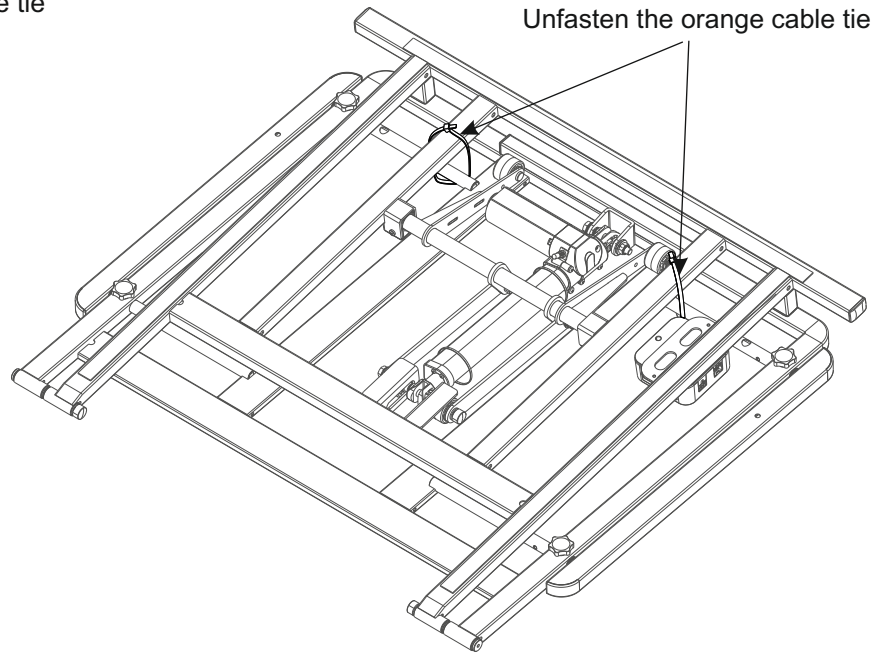

STEP2

Place the bed frame

Place the cloth cover side up on the bed.


When the user's bed frame has no backrest, in order to better fix the bed frame, it is recommended to fix the bottom frame with wall supporting units and straps. Otherwise, it may cause relative displacement of the bottom frame as it rises and falls during use.



When using this product, keep away from children to prevent pinching.




Do not place the adaptor on the bed or bed frame.

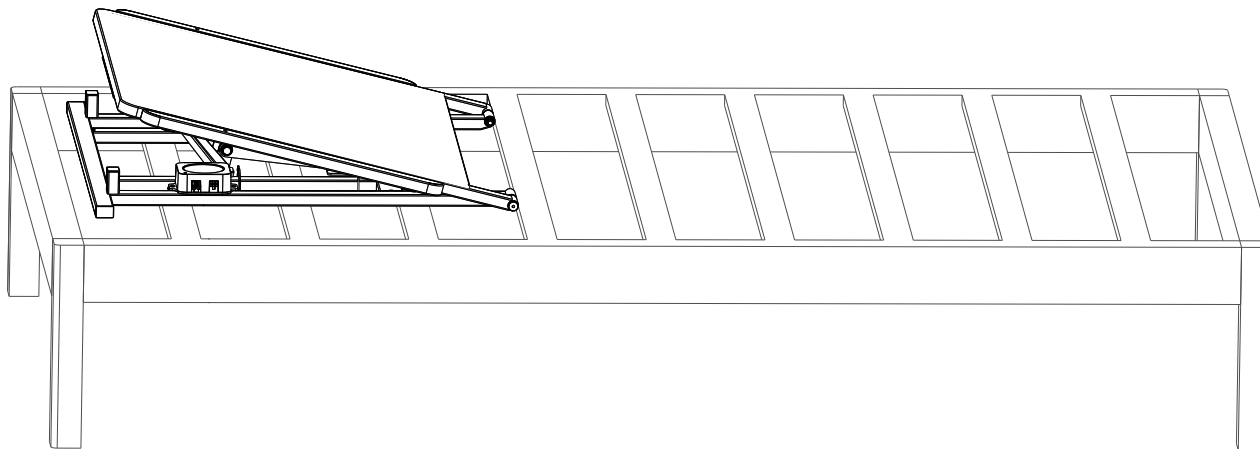

STEP3

Connect adaptor


Take the adaptor and power cord, insert the power cord into the adaptor hole, then insert the adaptor plug into the corresponding socket of the control box.

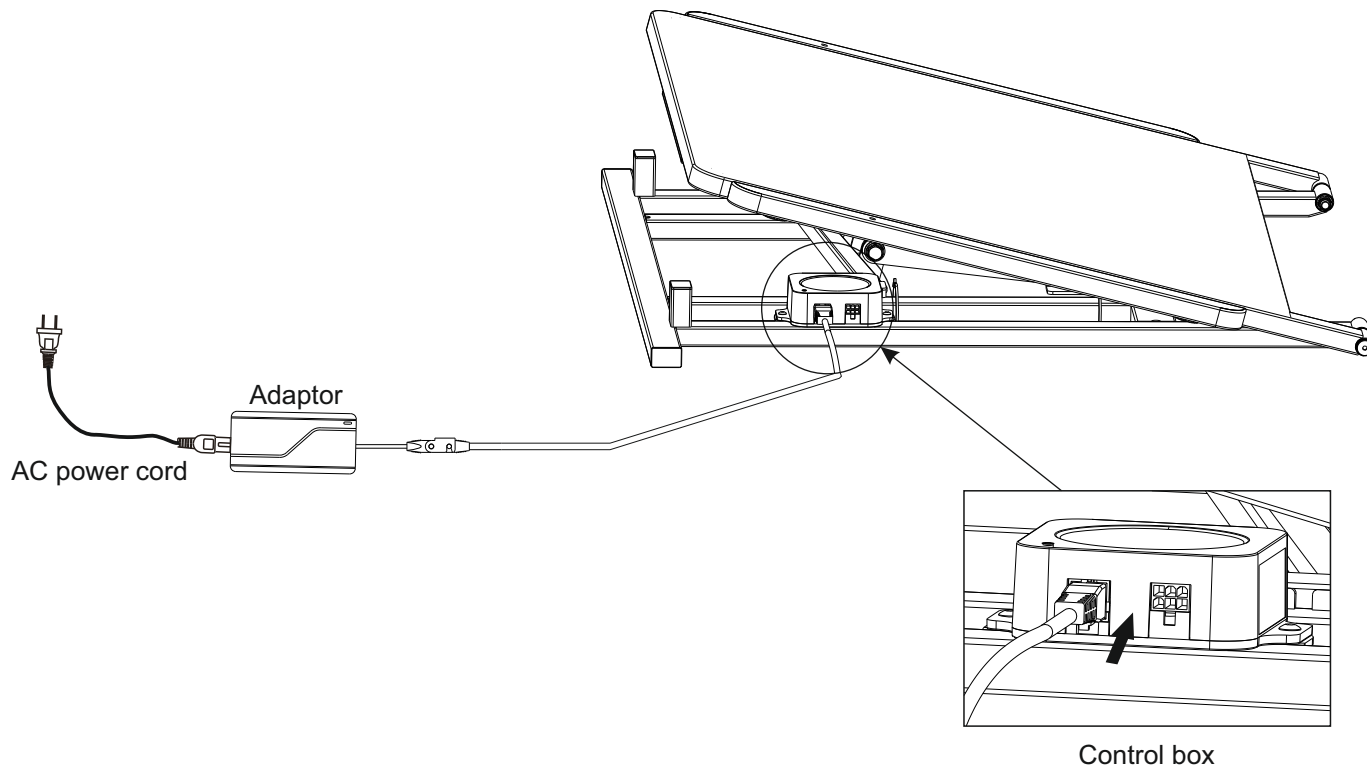

STEP4

Commissioning the bed frame


Use the remote control to raise and lower the bed frame once to ensure that the product can be used normally, and then complete the rest of the installation steps.

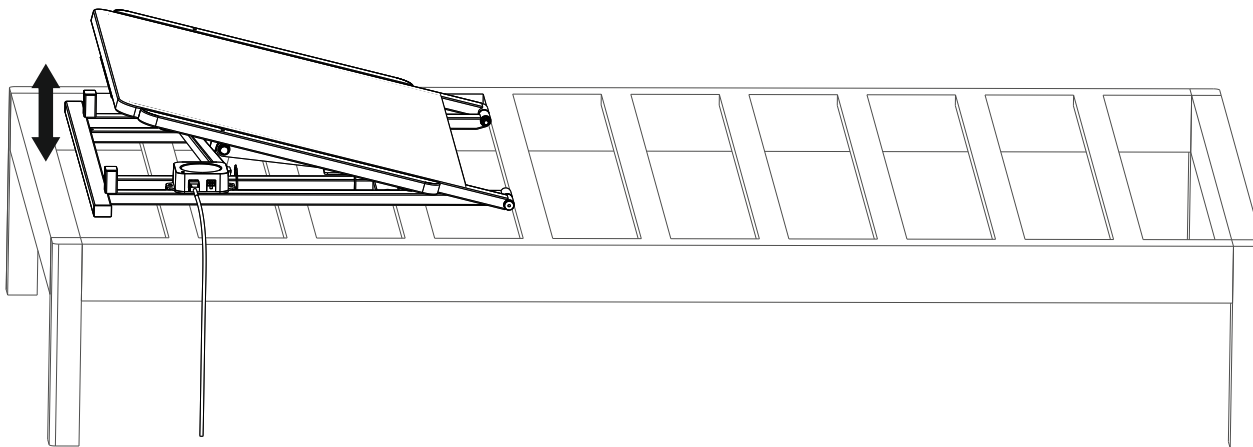

STEP5

Install the straps


- 1 Put the cloth cover side of the bed frame down, take out the two straps, with the smooth side facing up, first pass through the square tube shown in the bottom frame of the bed frame, and then pull it out from the metal buckle.

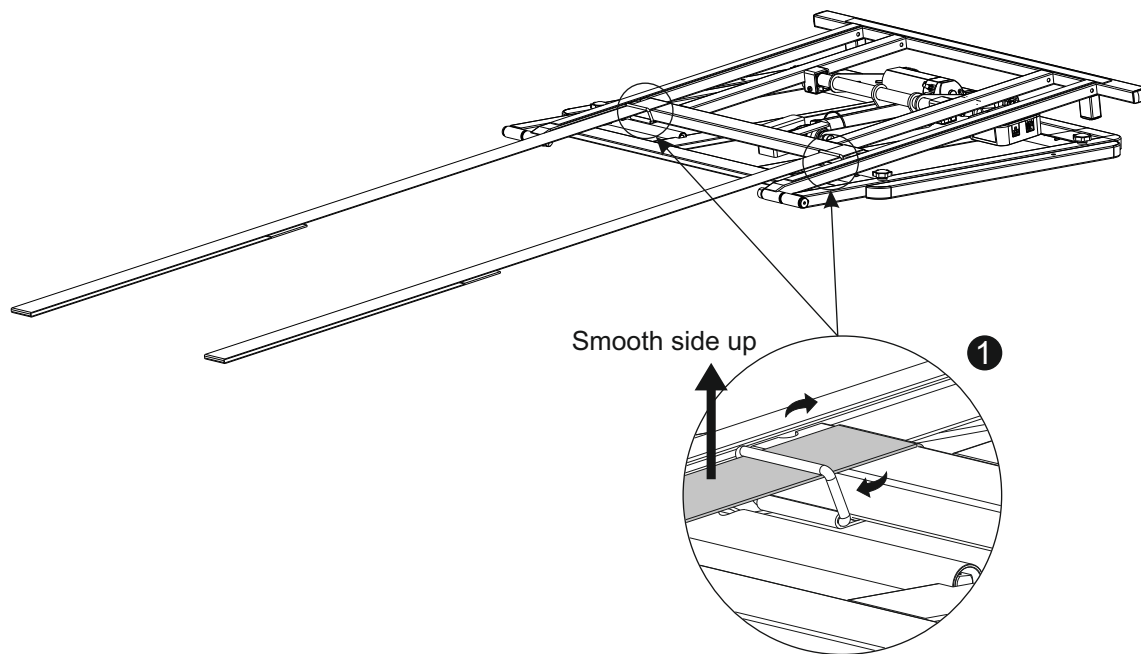

STEP5

Install the straps

- ② Turn the bed frame over so the cover is facing up, remove the mattress tailgate, and thread the straps through the holes in the mattress tailgate. (Note: Do not twist, reverse and twist the straps)

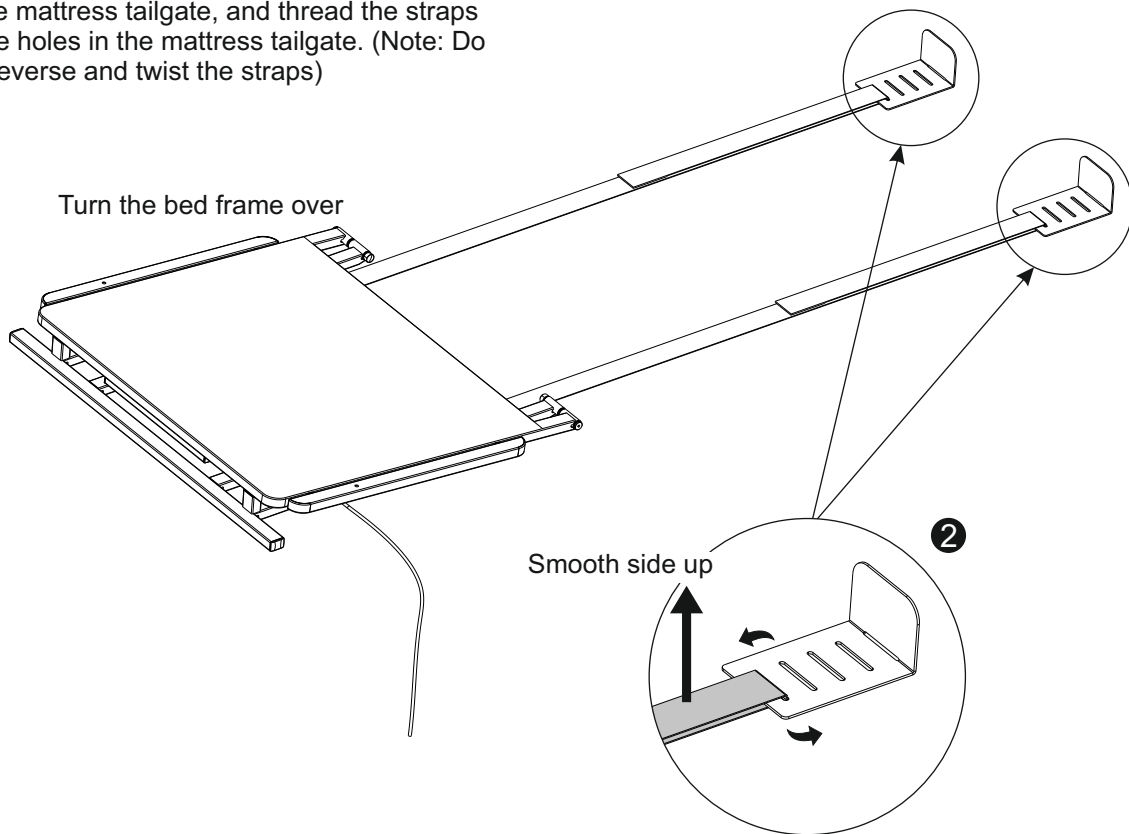


The straps pass through the holes in the mattress tailgate.

STEP 6

Install the wall supporting units




In order to prevent the adjustable bed frame from colliding directly with the wall or the headboard during the movement, which may cause damage to the wall or headboard, a wall supporting unit needs to be installed on the wall or the headboard.

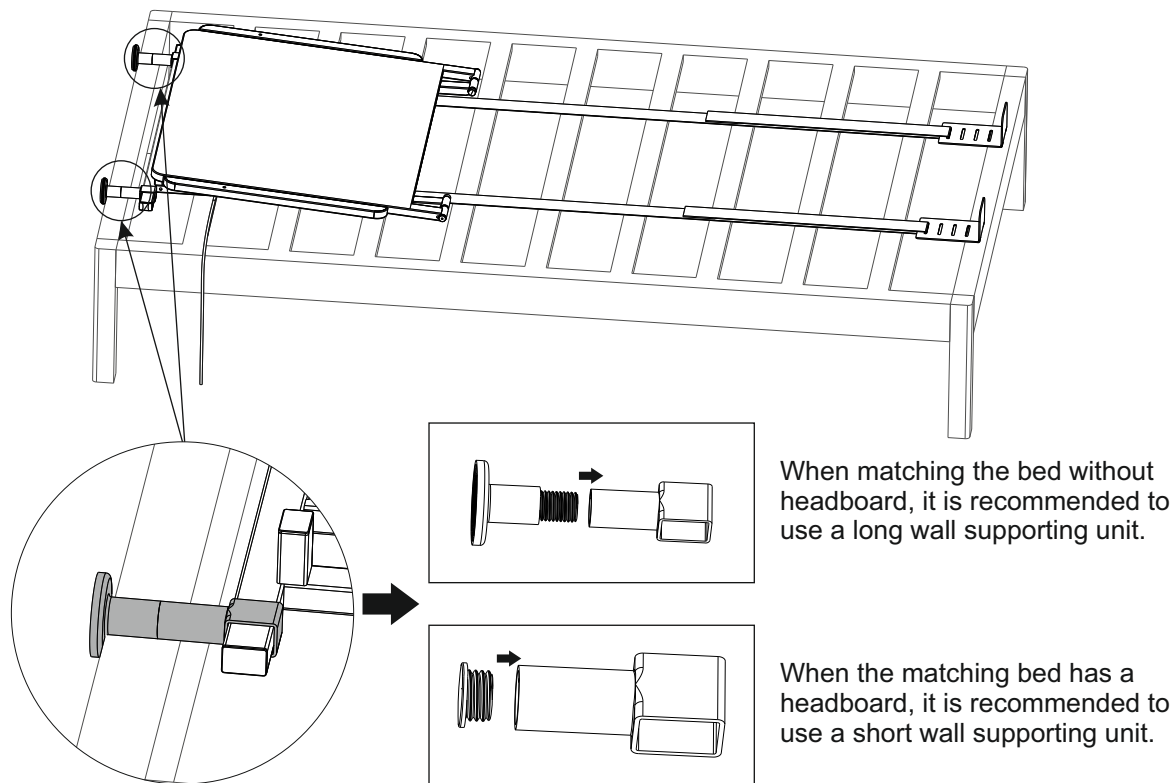

STEP 7

Install the bedside baffle

Install baffles on the left and right width-adjusting frames on the bed frame. The cylinders on the left and right baffles are aligned with the holes of the square tube and clamped down into the square tube to prevent the baffle from moving up and down.

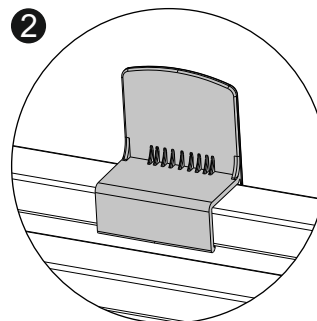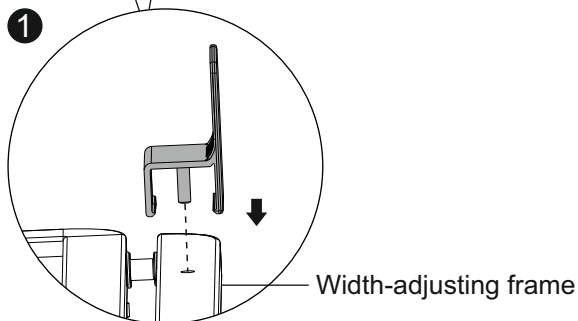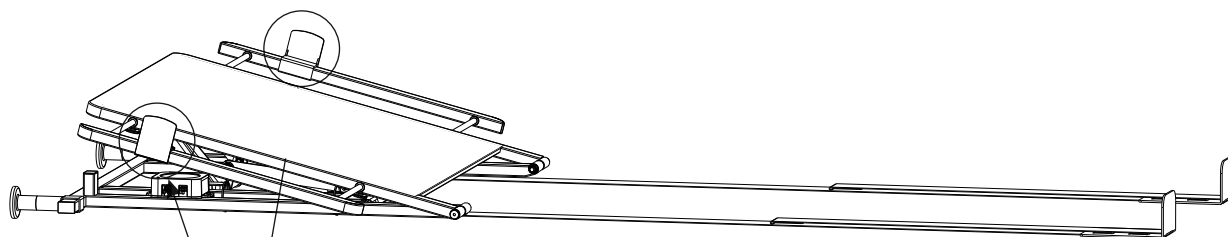


Insert the left and right baffles into the left and right square tubes on both sides of the bed frame, and insert the cylinder into the square tube hole.

STEP8

Adjust the bed tail baffle


Adjust the length of the straps so that the mattress tailgate is flush with the end of the bed.
(Note: the strap should not be twisted and rolled, it needs to be tightened)

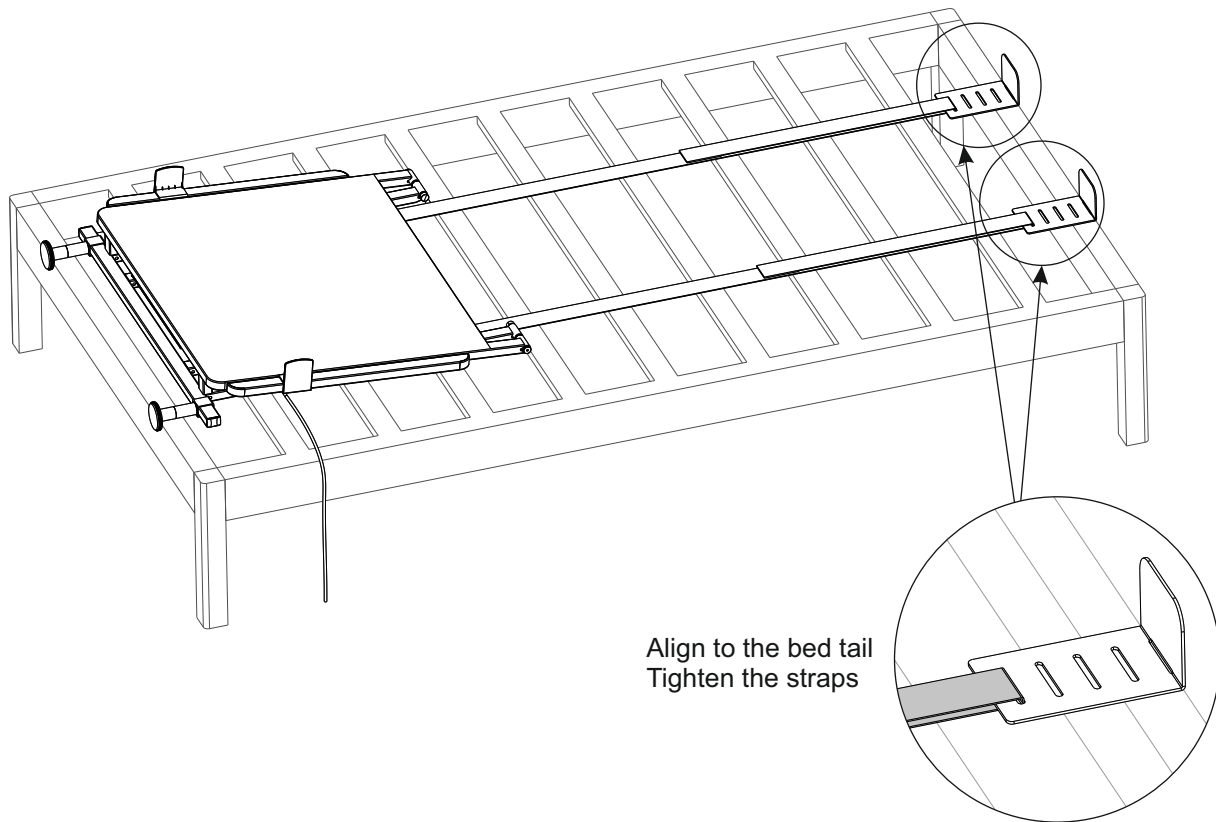

STEP9

Adjust the width of the bed frame



Note: Please select the appropriate product model and bed frame width according to the width of the mattress. It is recommended that the width of the bed frame be slightly smaller than the width of the mattress.

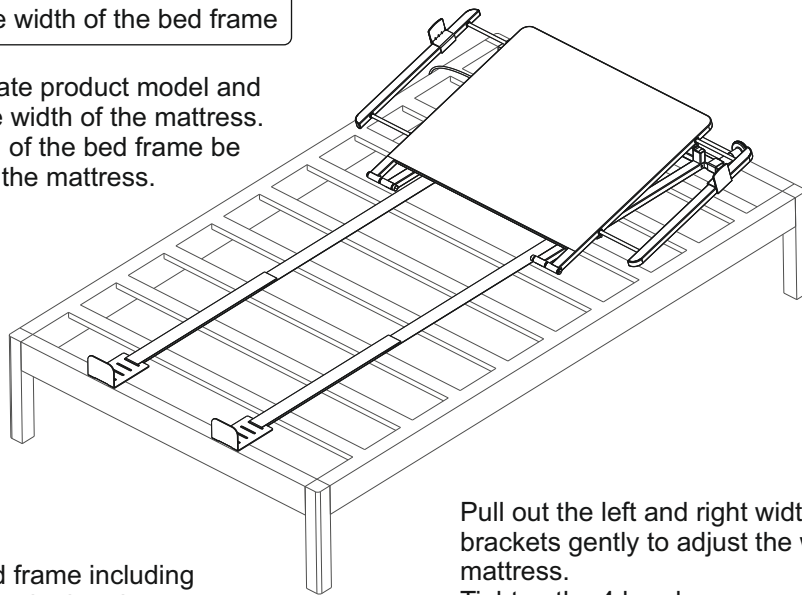

Pull up the side of the bed frame including the cloth cover, and loosen the hand screws of the left and right width adjustment brackets counterclockwise.

Pull out the left and right width adjustment brackets gently to adjust the width to match the mattress.


Tighten the 4 hand screws on the left and right width adjustment brackets clockwise to prevent the width adjustment bracket from falling off.

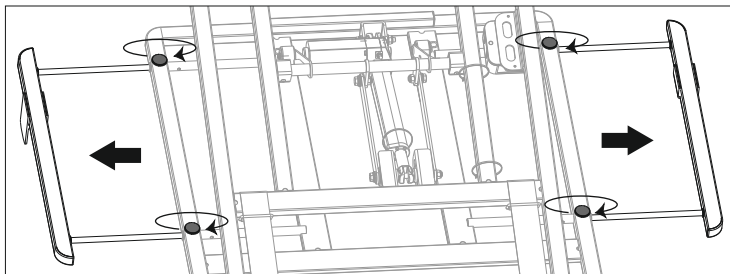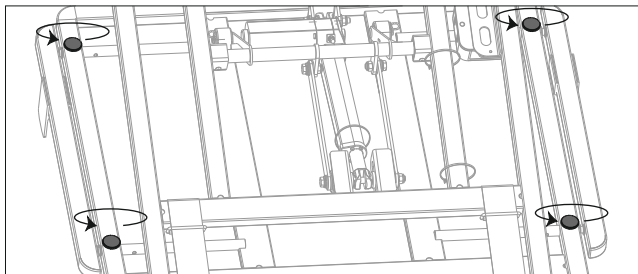

STEP10

Place mattress

Place the mattress on the adjustable bed frame, and the mattress needs to be stuck on baffle; Use the remote control to raise and lower the bed frame once to confirm that the product can be used normally.

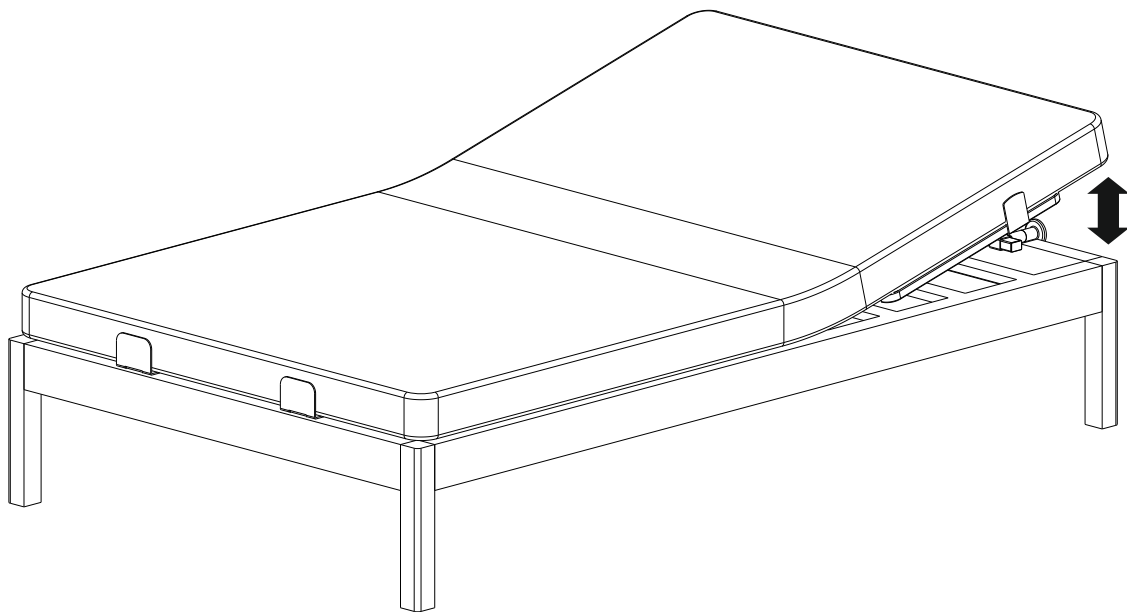

Troubleshooting

If the adjustable bed fails, please refer to the solution to the corresponding problem in the table below.

Problem	Solution
No features or function of the adjustable bed activates.	<ol style="list-style-type: none">1. Confirm whether the child lock is turned on, press the button on the remote control when the child lock is turned on, the indicator light will flash twice, and the bed will not perform any functions. To unlock, please follow [Child Lock Function] to turn off the child lock2. Make sure all the power cords are properly connected.3. Check whether the power cord is plugged into a working power outlet. Unplug the power cord from the socket. After 30 seconds, plug it back in again. Press any button on the remote to test whether it works.4. The remote control is not code-paired, please follow the [Remote Control Code Pairing] steps to re-pair.
The head is raised normally but cannot return to a flat position.	<ol style="list-style-type: none">1. The adjustable bed may be obstructed, and its smooth operation may be affected. Clear obstacles around and under the bed.2. Check whether the head section is too close to the wall or whether the wall supporting unit is installed correctly
The adjustable squeaks.	<ol style="list-style-type: none">1. The bed frame and mattress are not fastened, check whether the wall supporting unit is installed correctly.2. Check whether the mattress straps are tangled or the mattress baffle is installed correctly. If so, please operate it correctly according to the manual.3. Check whether the mattress is properly snapped into the bed tail baffle and side baffles.
There is a setback during the adjustment.	<ol style="list-style-type: none">1. Clean up any debris or obstacles under and around the adjustable bed.2. Make sure the control box and the motor socket wire are well connected.

If the problem cannot be solved according to the above instructions, please contact customer service.

Attention

01. Before turning on the power, check whether the voltage is normal and whether it meets the power requirements of this product:
AC100-240V, frequency 50/60HZ.
02. This product is only suitable for home use, not recommended for outdoor use.
03. The place where this product is placed should not be too humid and not exposed to direct sunlight. It is necessary to maintain proper air circulation so as not to affect the normal use of this product.
04. Do not use liquids on this product, in case of spillage, unplug the power cord in a safe manner. Make sure this product is completely dry before using it again.
05. This product must be protected from moisture, water, sun, shock, falling, and trampling during movement or transportation. When moving, it should be handled with care to avoid damage.
06. Do not put sharp objects (keys, knives, nail clippers, etc.) and hard objects on this product to avoid damage.
07. Children should not operate or use this product alone or play on it.
08. Before using this product, please make sure that there are no people or pets under the bed.
09. The power cord needs to be extended from the bottom of the product and inserted into the socket to ensure that it will not be pressed to cause damage during operation.
10. The electronic components, metals, plastics, wires, etc. contained in the electrical box should be disposed of in accordance with the environmental regulations of various countries, and please do not dispose of them according to conventional household waste.
11. When the product is in the lifting state, do not release all the weight on the head of the bed, so as not to damage the structure.
12. When the product is in a non-flat state, please do not perform strong impact sports such as jumping.
13. Non-professionals are not allowed to disassemble the electric bed structure and motor, so as not to cause irreversible damage to the electric bed.
14. This product has been equipped with a corresponding remote control when it leaves the factory, please operate and use it according to the instruction manual.
15. After the power supply is installed, use the remote control to check whether the functions are working normally.
16. Please do not open or tamper with the control box, motor, or remote control. Any modification will void the normal warranty.
17. The maximum load-bearing capacity of this product is shared on the bed, not on the head of the bed alone; damages caused by exceeding the load-bearing capacity cannot be guaranteed.
18. It is recommended to wear protective gear during installation and disassembly.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

RoHS

MADE IN P.R.C.



Hereby Spacetronik Sp. z o.o declares under its sole responsibility that the product SPBDORMEE is in conformity with following directives: EMC (2014/30/UE), LVD (2014/35/UE), RoHS (2011/65/UE + 2015/863/UE). Full document (declaration of conformity) is available for download from the website www.spacetronik.store. The WEEE symbol (the crossed-out wheeled bin) using indicates that this product is not home waste. Appropriate waste management aids in avoiding consequences which are harmful for people and environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. In order to get detailed information about recycling this product please contact your retailer or a local authority.

Made in P.R.C for: Spacetronik Sp. z o.o.

ul. Wiśniowa 36, 64-000 Kościan, Poland

info@spacetronik.store

www.spacetronik.store